measure, analyze, innovate,

VGA Display 12"

LCD-TFT Monitor with Touch Screen

Technical Data

mm cd/m² °	12,1 TFT 0,3075x0,3075 800x600 SVGA 246x184,5 262 144 10/25 ms 500:1 400 50 60
mm cd/m² o	800x600 SVGA 246x184,5 262 144 10/25 ms 500:1 400 50
cd/m² °	246x184,5 262 144 10/25 ms 500:1 400 50
cd/m² °	262 144 10/25 ms 500:1 400 50
0	10/25 ms 500:1 400 50 60
0	500:1 400 50 60
0	50 60
0	50 60
0	60
0	60
0	70
	2 CCFL
h	50 000
	Analog VGA & Video
	(Composite Video System
	PAL/NTSC/SECAM)
	15 pin D-Sub
	BNC Jack
	S-VHS Din Type
	3 VII3 DIII 19PC
KH-	31,5 48
	56 75
П	
\/A.C	On-screen display 100 240
	50 60
	12
	12 ±5 %
V	24 35/2 A
	35 V ±5 %
	VESA DPMS standard
W	12
W	1
°C	0 50
°C	-20 60
%	10 85
	TTL Level ± polarity
	non-interlace
mm	330x240x55
kg	3,6
	CE (EMC+LVD)/FCC
Hz	10
	One-way 1m/m
MHz	50
	°C °C %

This information corresponds to the current state of knowledge. Kistler reserves the right to make technical changes. Liability for consequential damage resulting from the use of Kistler products is excluded.





Mounting

- The monitor must be mounted in full compliance with all instructions! Use only mounting equipment specified by
- No warranty, expressed or implied, is provided for damages resulting from improper mounting, or from the use of improper mounting equipment
- The device must be installed clear of the airbag zone
- Do not position the monitor, mounting hardware, cables and/or any other associated component in any location or configuration that may obstruct or diminish access to vehicle control systems or components, or that can in any way compromise safe vehicle operation
- Do not position the monitor, mounting hardware, cables and/or any other associated component in any location or configuration that may obstruct or diminish driver field of vision

Operation

- Position and secure monitor, mounting equipment, cables and/or any other associated component before operating the vehicle. Adjusting the monitor and/or other components while driving can endanger safety of the driver, passengers and/or others in proximity to the vehicle
- For reasons of safety, do not operate computer when driving
- Be sure that laptop/notebook computer is not within the airbag zone when the vehicle is being driven. It is recommended that the passenger airbag be deactivated when driving alone
- Check to be sure that mounting screws fit correctly and are fully tightened before driving the vehicle; (all screws used in the monitor are English-thread)

©2012, Kistler Group, Eulachstrasse 22, 8408 Winterthur, Switzerland Tel. +41 52 224 11 11, Fax +41 52 224 14 14, info@kistler.com, www.kistler.com Kistler is a registered trademark of Kistler Holding AG.

measure. analyze. innovate.


Suction Holder

- Do not leave the suction holder with mounted device unattended. Remove the suction holder if it is not to be used for any extended period of time. The holder may come loose from the vehicle window glass
- When mounting the holder, be sure to note the position of the pump piston. If the red ring on the pump is visible, the suction force will soon be insufficient to maintain safe, secure mounting. In this event, increase the vacuum by actuating the pump until the red ring is no longer visible

110 **-10** 55

Fig. 2: Back side

Dimensions

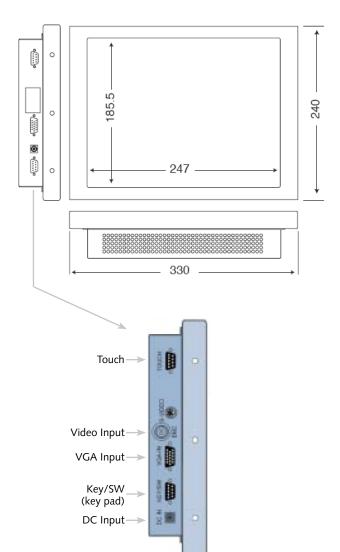

Ordering Code

• VGA Monitor 12"

Type KCD16303

Page 2/2

Fig. 1: Front side This information corresponds to the current state of knowledge. Kistler reserves the right to make technical changes. Liability for consequential damage resulting from the use of Kistler products is excluded.

©2012, Kistler Group, Eulachstrasse 22, 8408 Winterthur, Switzerland Tel. +41 52 224 11 11, Fax +41 52 224 14 14, info@kistler.com, www.kistler.com Kistler is a registered trademark of Kistler Holding AG.