

# **DMU User's Manual**

## **VG600AA-**

Rev. 1.0, January 2001

Document 6001-0007



# **Crossbow**

©1999-2001 Crossbow Technology, Inc. All rights reserved. Information in this document is subject to change without notice.

Crossbow and SoftSensor are registered trademarks and DMU is a trademark of Crossbow Technology, Inc. Other product and trade names are trademarks or registered trademarks of their respective holders.

# Table of Contents

<b>1</b>	<b>Introduction .....</b>	<b>1</b>
1.1	The DMU™ Series Motion and Attitude Sensing Units.....	1
1.2	Package Contents .....	2
<b>2</b>	<b>Quick Start.....</b>	<b>3</b>
2.1	X-View Software .....	3
2.1.1	<i>X-View Computer Requirements .....</i>	<i>3</i>
2.1.2	<i>Install X-View.....</i>	<i>3</i>
2.2	Connections .....	3
2.3	Setup X-View .....	4
2.4	Take Measurements .....	4
<b>3</b>	<b>DMU Details .....</b>	<b>6</b>
3.1	DMU Coordinate System.....	6
3.2	Connections .....	7
3.3	Interface .....	10
3.4	Measurement Modes.....	10
3.4.1	<i>Voltage Mode.....</i>	<i>10</i>
3.4.2	<i>Scaled Sensor Mode .....</i>	<i>10</i>
3.4.3	<i>Angle Mode .....</i>	<i>11</i>
3.5	Commands .....	13
3.5.1	<i>Command List .....</i>	<i>13</i>
3.6	Data Packet Format.....	16
3.7	Timing.....	18
3.8	Temperature Sensor .....	19
3.9	Analog Output.....	19
3.9.1	<i>“Raw” Accelerometer Voltage.....</i>	<i>20</i>
3.9.2	<i>Scaled Accelerometer Voltage.....</i>	<i>20</i>
3.9.3	<i>Scaled Rate Sensor Voltage.....</i>	<i>21</i>
3.9.4	<i>Stabilized Pitch and Roll Voltages (VGX and FOG only) .....</i>	<i>21</i>
3.10	Adaptive-T Algorithm (Optional, must be installed at Crossbow factory).....	21
<b>4</b>	<b>DMU Operating Tips .....</b>	<b>23</b>
4.1	The “Zero” Command.....	23

4.2	The Erection Rate.....	23
4.3	Mounting the DMU.....	25
4.4	DMU Start Up Procedure.....	25
4.5	Advanced Strategies for Adjusting the Erection Rate.....	26
4.6	Adapted Flight Profile T-Setting.....	27
<b>5</b>	<b>Appendix A. Mechanical Specifications.....</b>	<b>29</b>
5.1	VG600AA Outline Drawing.....	29
<b>6</b>	<b>Appendix B. DMU Output Quick Reference.....</b>	<b>30</b>
6.1	Analog Output Conversion .....	30
6.2	Digital Output Conversion .....	31
<b>7</b>	<b>Appendix C. DMU Command Quick Reference.....</b>	<b>32</b>
<b>8</b>	<b>Appendix D. VG600AA-204 Analog Outputs.....</b>	<b>33</b>
8.1	Model VG600AA-204 Connector Pin Out.....	33
8.2	Model VG600AA-204 Analog Output Conversion .....	34
<b>9</b>	<b>Appendix E. Warranty and Support Information.....</b>	<b>35</b>
9.1	Customer Service .....	35
9.2	Contact Directory .....	35
9.3	Return Procedure.....	35
9.3.1	Authorization.....	35
9.3.2	Identification and Protection.....	36
9.3.3	Sealing the Container.....	36
9.3.4	Marking.....	36
9.3.5	Return Shipping Address.....	36
9.4	Warranty .....	36

## About this Manual

The following annotations have been used to provide additional information.

### ◀ NOTE

Note provides additional information about the topic.

### ☑ EXAMPLE

Examples are given throughout the manual to help the reader understand the terminology.

### ⚡ IMPORTANT

This symbol defines items that have significant meaning to the user

### 💣 WARNING

The user should pay particular attention to this symbol. It means there is a chance that physical harm could happen to either the person or the equipment.

The following paragraph heading formatting is used in this manual:

## 1 Heading 1

### 1.1 Heading 2

#### 1.1.1 Heading 3

Normal

## 1 Introduction

### 1.1 The DMU™ Series Motion and Attitude Sensing Units

This manual explains the use of VG600AA. The VG600AA is a Crossbow Technology Dynamic Measurement Unit (DMU) designed for automotive testing and measurements.

The VG600AA is a six-axis measurement system designed to measure linear acceleration along three orthogonal axes and rotation rates around three orthogonal axes. This device uses three accelerometers and three angular rate sensors to make a complete measurement of the dynamics of your system.

In addition, it is designed to provide stabilized pitch and roll in dynamic environments. The VG600AA is the solid state equivalent of a vertical gyro/artificial horizon display.

The VG600AA has the unique ability to use the stabilized angle information to translate the acceleration measurement from the DMU body frame to the local earth level frame. This removes the effect of tilt and gravity from the accelerations reported.

The DMU series units are low power, fast turn on, reliable and accurate solutions for a wide variety of stabilization and measurement applications.

All DMU products have both an analog output and an RS-232 serial link. Data may be requested via the serial link as a single measurement or streamed continuously. The analog outputs are fully signal conditioned and may be connected directly to a data acquisition device.

The Crossbow DMUs employ on board digital processing to provide application-specific outputs and to compensate for deterministic error sources within the unit. The DMUs accomplish these tasks with an analog to digital converter and a high performance Digital Signal Processor.

All six of the DMU-6X, DMU-H6X, and DMU-VGX sensor elements are micro-machined devices. The three angular rate sensors consist of vibrating ceramic plates that utilize the Coriolis force to output angular rate independently of acceleration. The three MEMS accelerometers are surface micro-machined silicon devices that use differential capacitance to sense acceleration. Solid state MEMS sensors make the DMU-6X, DMU-H6X, and DMU-VGX responsive and reliable.

The VG600AA uses three micro electro-mechanical machined (MEMS) accelerometers and three fiber optic gyro (FOG) angular rate sensors. The three MEMS accelerometers are surface micro-machined silicon devices that use differential capacitance to sense acceleration. These solid state MEMS sensors are responsive and reliable. The FOG rate sensors provide

angular rate measurements that are more accurate and subject to less drift than the silicon based rate sensors.

## 1.2 Package Contents

In addition to your DMU sensor product you should have:

- **3 Floppy Disks with X-View Software**

X-View will allow you to immediately view the outputs of the DMU on a PC running Microsoft® Windows95™ or WindowsNT™. You can also download this software from Crossbow's web site at <http://www.xbow.com>.

- **1 Digital Signal Cable.**

This links the DMU directly to a serial port. Only the transmit, receive, power, and ground channels are used. The analog outputs are not connected.

- **1 DMU Calibration Sheet**

The Digital Calibration Sheets contains the custom offset and sensitivity information for your DMU. The calibration sheet is not needed for normal operation as the DMU has an internal EEPROM to store its calibration data. However, this information can be input to the configuration screen of X-View to correctly scale the output data. Save this page!

- **1 DMU Data Sheet**

This contains valuable digital interface information including data packet formats and conversion factors.

## 2 Quick Start

### 2.1 X-View Software

Evaluation is straightforward. Crossbow includes X-View software to allow you to use the DMU right out of the box. Install the X-View software, connect the DMU to your serial port, apply power to your unit and start taking measurements.

#### 2.1.1 X-View Computer Requirements

The following are minimum capabilities that your computer should have to run X-View successfully:

- CPU: Pentium-class
- RAM Memory: 32MB minimum, 64MB recommended
- Hard Drive Free Memory: 15MB
- Operating System: Windows 95, 98, NT4, 2000

#### 2.1.2 Install X-View

To install X-View in your computer:

1. Put in disk 1.
2. Double click on the setup file.
3. Follow the setup wizard instructions.

If you have any problems or questions, you may consult the extensive X-View help menu or contact Crossbow directly.

The registration button is for X-Analyze only. X-Analyze allows you to save data and print graphs. X-Analyze is sold as a separate product. Contact Crossbow for purchasing information.

### 2.2 Connections

The DMU is shipped with a cable to connect the DMU to a PC com port.

1. Connect the 15-pin end of the digital signal cable to the port on the DMU.
2. Connect the 9-pin end of the cable to the serial port of your computer.
3. The additional black and red wires on the cable supply power to the DMU. Match red to (+) power and black to (-) ground. The input voltage can range from 12 - 15 VDC at 1 A. See the specifications sheet for the VG600AA for details.



### WARNING

**Do not reverse the power leads!** Applying the wrong power to the DMU

can damage the unit; Crossbow is not responsible for resulting damage to the unit.

## ◀ NOTE

The analog outputs from the DMU are unconnected in this cable.

## 2.3 Setup X-View

Any time you see a “HELP” button in X-View, you can click on it to see the X-View extensive online manual.

With the DMU connected to your PC serial port, open the X-View software.

1. Click on “CONFIG” to get to the configuration menu.
2. Click “Add new config” and type in a name like “DMU” for your configuration file.
3. Click “Continue.” With the profile name highlighted, choose the family name “DMU” and the product “DMU-FOG. Then choose your com port.
4. Click “Continue.”
5. Confirm that the G range and angular rate range match your DMU. You can choose what kind of data to look at when you use the “Graph” option.
6. Click on “Continue.”
7. If the status indicator says, “Connected”, you’re ready to go. If the status light doesn’t say connected, check the connections between the DMU and the computer; check the power; check the serial com port assignment on your computer.

## 2.4 Take Measurements

Once you have configured X-View to work with your DMU, pick what kind of measurement you wish to see. “Graph” will show you the output you choose as a strip-chart type graph of value vs. time. “FFT” will show you a real-time fast Fourier transform of the output you choose. “Horizon” will show an artificial horizon and the stabilized pitch and roll output of the DMU. “Tilt” is grayed out; this works with the CXTILT tilt sensor.

Let the DMU warm up for 30 seconds when you first turn it on. You should zero the rate sensors when you first use the DMU. Set the DMU down in a stable place. Go to the “Horizon” screen and click the “ZERO” button. This measures the rate sensor bias and sets the outputs to zero. The average time determines the number of samples for averaging. 1 unit equals 10 samples at the ADC sampling rate. For normal applications, your average

time should be at least 20. The “zero” command is discussed more in “The ‘Zero’ Command” section. Now you’re ready to use the DMU!

If you have problems with X-View, use the help button to access the X-View manual. The X-View manual contains complete details for using X-View.

## 3 DMU Details

### 3.1 DMU Coordinate System

The DMU will have a sticker on one face illustrating the DMU coordinate system. With the connector facing you, and the mounting plate down, the axes are defined as:

**X-axis** – from face with connector through the DMU.

**Y-axis** – along the face with connector from left to right.

**Z-axis** – along the face with the connector from top to bottom.

The axes form an orthogonal right-handed coordinate system. An acceleration is positive when it is oriented towards the positive side of the coordinate axis. For example, with the DMU sitting on a level table, it will measure zero g along the x- and y-axes and -1 g along the z-axis. If you slide the DMU forward, this is an increase in velocity along the positive direction of the x-axis; so this is a positive acceleration, and the DMU will report a positive acceleration. On some models, the acceleration reported will be in the DMU body frame, and in some models the acceleration reported will be in the earth-level coordinate frame. On some models, the definition of positive acceleration is the opposite of the above. See the table below to reference the available output options for the acceleration.

The angular rate sensors are aligned with these same axes. The rate sensors measure angular rotation rate around a given axis. The rate measurements are labeled by the appropriate axis. The direction of a positive rotation is defined by the right-hand rule. With the thumb of your right hand pointing along the axis in a positive direction, your fingers curl around in the positive rotation direction. For example, if the DMU is sitting on a level surface and you rotate it clockwise on that surface, this will be a positive rotation around the z-axis. The x- and y-axis rate sensors would measure zero angular rate, and the z-axis sensor would measure a positive angular rate.

Pitch is defined positive for a positive rotation around the y-axis (pitch up).

Roll is defined as positive for a positive rotation around the x-axis (roll right).

The angles are defined as standard Euler angles using a 3-2-1 system. To rotate from the body frame to an earth-level frame, roll first, then pitch, then yaw.


The VG600AA coordinate definition is consistent with the SAE J670e convention on vehicle coordinate systems. See Table 1.

**Table 1. VG600AA Submodel Definitions of Acceleration Output**

Submodel	Acceleration Frame	Coordinate Sign (positive = SAE)
-201	Earth	+
-202	DMU Body	+
-203	Earth	-
-204	DMU Body	-

### 3.2 Connections

The DMU has a female DB-15 connector. The signals are as shown in Table 2. All analog outputs are fully buffered and are designed to interface directly to data acquisition equipment. See “Analog Output” for details.

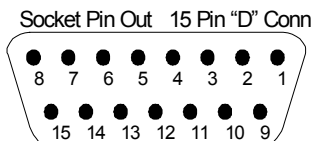

## NOTE

See Appendix D for the correct pin out for Model VG600AA-204.

**Table 2. DMU Connector Pin Out  
Models VG600AA-201, -202, and 203**

Pin	Signal
1	RS-232 Transmit Data
2	RS-232 Receive Data
3	Positive Power Input (+)
4	Ground
5	X-axis accelerometer Analog voltage <sup>1</sup>
6	Y-axis accelerometer Analog voltage <sup>1</sup>
7	Z-axis accelerometer Analog voltage <sup>1</sup>
8	X-axis scaled accelerometer level frame analog voltage <sup>2</sup>
9	Y-axis scaled accelerometer level frame analog voltage <sup>2</sup>
10	Yaw rate analog voltage <sup>3</sup>
11	NC – factory use only
12	Roll angle analog voltage <sup>4</sup>
13	Pitch angle analog voltage <sup>4</sup>
14	Z-axis scaled accelerometer level frame analog voltage <sup>2</sup>
15	NC – factory use only

Notes:

1. The accelerometer analog voltage outputs are the raw sensor output. These outputs are taken from the output of the accelerometers.
2. The accelerometer analog output voltages are scaled to represent g's. The acceleration data is transformed from body coordinates to the earth level frame coordinates. These outputs are created by a D/A converter.
3. The yaw rate sensor analog voltage output is scaled to represent °/s. This output is created by a D/A converter.
4. The pitch and roll angle analog outputs are scaled to represent degrees. These outputs are created by a D/A converter.

The serial interface connection is standard RS-232. On a standard DB-25 COM port connector, make the connections per Table 3.

Table 3. DB-25 COM Port Connections

COM Port Connector		DMU Connector	
Pin #	Signal	Pin #	Signal
2	TxD	2	RxD
3	RxD	1	TxD
7	GND*	4	GND*

\*Note: Pin 4 on the DMU is data ground as well as power ground.

On a standard DB-9 COM port connector, make the connections per Table 4.

Table 4. DB-9 COM Port Connections

COM Port Connector		DMU Connector	
Pin #	Signal	Pin #	Signal
2	RxD	1	TxD
3	TxD	2	RxD
5	GND*	4	GND*

\*Note: Pin 4 on the DMU is data ground as well as power ground.

Power is applied to the DMU on pins 3 and 4. Pin 4 is ground; Pin 3 should have 12 -- 15 VDC unregulated at 1 A. If you are using the cable supplied with the DMU, the power supply wires are broken out of the cable at the DB-9 connector. The red wire is connected to the positive power input; the black wire is connected to the power supply ground. DO NOT REVERSE THE POWER LEADS.

The analog outputs are unconnected in the cable we supply. The analog outputs are fully buffered and conditioned and can be connected directly to an A/D. The analog outputs have a 1 kΩ resistor in series with each output to protect the outputs from a short circuit. This should be taken into account when using data acquisition devices with moderate input impedances (less than 10 kΩ.)

### 3.3 Interface

The serial interface is standard RS-232, 38400 baud, 8 data bits, 1 start bit, 1 stop bit, no parity, no flow control.

Crossbow will supply DMU communication software examples written in LabView. Source code for the DMU serial interface can be obtained via the web at <http://www.xbow.com>. The source code has a .vi file format and requires a National Instruments LabView 5.0 license to use.

### 3.4 Measurement Modes

The VG600AA is designed to operate as a vertical gyro; however, you can also use it as a six-axis sensor. The VG600AA can be set to operate in one of three modes: voltage mode, scaled sensor mode, or angle (VG) mode. The DMU must be in VG mode to output the acceleration data in the earth level reference frame. The measurement mode selects the information that is sent in the data packet over the RS-232 interface. See “Data Packet Format” for the actual structure of the data packet in each mode.

#### 3.4.1 Voltage Mode

In voltage mode, the analog sensors are sampled and converted to digital data with 1 mV resolution. The digital data represents the direct output of the sensors. The data is 12-bit, unsigned. The value for each sensor is sent as 2 bytes in the data packet over the serial interface. A single data packet can be requested using a serial poll command or the DMU can be set to continuously output data packets to the host.

The voltage data is scaled as:

$$\text{voltage} = \text{data} * (5 \text{ V}) / 2^{12},$$

where **voltage** is the voltage measured at the sensor, and **data** is the value of the unsigned 16-bit integer in the data packet. Note that although the data is sent as 16-bit integers, the data has a resolution of only 12 bits.

The DMU rate sensor and angle analog outputs are **not** enabled in this mode. Only the linear accelerometer analog output on pins 5 – 7 will be enabled because these signals are taken directly from the accelerometers. See the “Analog Output” section for a complete description of the analog outputs.

#### 3.4.2 Scaled Sensor Mode

In scaled sensor mode, the analog sensors are sampled, converted to digital data, temperature compensated, and scaled to engineering units. The digital data represents the actual value of the quantities measured. A calibration table for each sensor is stored in the DMU non-volatile memory. A single data packet can be requested using a serial poll command or the DMU can be set to continuously output data packets to the host. The data is sent as

signed 16-bit 2's complement integers. In this mode, the DMU operates as a six-axis measurement system.

The scaled sensor analog outputs are enabled in this mode. Note that stabilized pitch and roll angles are not available in scaled sensor mode. See the "Analog Output" section for a complete description of the analog outputs.

To convert the acceleration data into G's, use the following conversion:

$$\text{accel} = \text{data} * (\text{GR} * 1.5) / 2^{15}$$

where **accel** is the actual measured acceleration in G's, **data** is the digital data sent by the DMU, and **GR** is the G Range for your DMU. (The data is scaled so that 1 G = 9.80 m s<sup>-2</sup>.) The G range of your DMU is the range of accelerations your DMU will measure. For example, if your DMU uses a ±2 G accelerometer, then the G range is 2.

To convert the angular rate data into degrees per second, use the following conversion:

$$\text{rate} = \text{data} * (\text{RR} * 1.5) / 2^{15}$$

where **rate** is the actual measured angular rate in °/sec, **data** is the digital data sent by the DMU, and **RR** is the Angular rate Range of your DMU. The angular rate range of your DMU is the range of angular rates your DMU will measure.

## NOTE

**RR** is 260 for all VG600AAs.

### 3.4.3 Angle Mode

In angle mode, the DMU will act as a vertical gyro, and output the stabilized pitch and roll angles along with the angular rate and acceleration information. The angular rate and acceleration values are calculated as described in the scaled sensor mode.

The DMU analog outputs are enabled in this mode, including stabilized pitch and roll angles. See the "Analog Output" section for a complete description of the analog outputs.

In angle mode, the DMU uses the angular rate sensors to integrate over your rotational motion and find the actual pitch and roll angles. The DMU uses the accelerometers to correct for the drift in the rate sensors. This is the modern equivalent of an analog vertical gyro that used a plumb bob in a feedback loop to keep the gyro axis stabilized to vertical. The DMU takes advantage of the rate gyros' sensitivity to quick motions to maintain an accurate orientation when accelerations would otherwise throw off the accelerometers' measurement of the DMU orientation relative to gravity.

The DMU uses the accelerometers to provide long term stability to keep the rate gyro drift in check.

The DMU gives you control over the weighting between the accelerometers and rate gyros through a parameter called the “erection rate.” This term is derived from analog vertical gyros, and refers to the rate at which the system can pull the gyro spin axis back to vertical as measured by gravity. With a small erection rate, you are depending more on the rate gyros than the accelerometers; with a large erection rate, you are forcing the rate gyros to follow the accelerometer measurement of vertical more closely. In general, for dynamic measurements, you will want a low erection rate. But the erection rate should always be greater than the drift rate of the rate gyros. The erection rate is discussed in section 4.2 in more detail.

The VG600AA outputs the pitch and roll angles in the digital data packet in angle mode. To convert the digital data to angle, use the following relation:

$$\text{angle} = \text{data} * (180^\circ) / 2^{15},$$

where **angle** is the actual angle in degrees (either pitch or roll), and **data** is the signed integer data output in the data packet.

With the -201 and -203 VG600AAs, in angle mode, the acceleration measurements will be rotated into the earth level coordinate frame. This is the acceleration that would have been measured if the DMU was kept level relative to the gravity. The DMU uses its pitch and roll angle measurement to translate the acceleration between the DMU body frame and the level frame. You can check this by graphing the acceleration output and slowly tilting the DMU. You will see that the X- and Y- axis components of acceleration remain near zero, while the Z-axis component stays at 1 g.

If you have a -202 or -204 VG600AA, the acceleration measurement will always be reported in the DMU body coordinate frame. The DMU will output the actual acceleration measured along each coordinate axis. You can check this by graphing the acceleration output and slowly tilting the DMU. You will see that the X- or Y- axis component of acceleration will go towards 1 g (depending on which axis you tilt the unit), while the Z-axis component goes to 0 g.



**Description** Changes measurement type to Angle (VG) Mode. DMU calculates stabilized pitch and roll. Also outputs sensor measurements in scaled engineering units.

**Command** Polled Mode

**Character(s) Sent** P

**Response** none

**Description** Changes data output mode to Polled Mode. DMU will output a single data packet when it receives a "G" command.

**Command** Continuous Mode

**Character(s) Sent** C

**Response** Data Packets

**Description** Changes data output mode to Continuous Mode. DMU will immediately start to output data packets in continuous mode. Data rate will depend on the measurement type the DMU is implementing (Raw, Scaled, or Angle). Sending a "G" will return DMU to Polled Mode.

**Command** Request Data

**Character(s) Sent** G

**Response** Data Packet

**Description** "G" requests a single data packet. DMU will respond with a data packet. The format of the data packet will change with the measurement mode (Raw, Scaled, or Angle). Sending the DMU a "G" while it is in Continuous Mode will place the DMU in Polled Mode.

**Command** Set Erection Rate (VGX and FOG only)

**Character(s) Sent** T<x>

**Response** none

**Description**

The T command sets the vertical gyro erection rate. The argument of the command <x> is a single binary byte that represents the value you want to set as the erection rate. The units are in degrees per minute. For example, if you wanted to set the erection rate to 50 deg/min, you would send the command T<50>, which in hex would be 54 32.

**Command**

Calibrate Rate Sensor Bias

**Character(s) Sent**

z<x>

**Response**

Z

**Description**

Measure the bias on each rate sensor and set as the new zero. **The DMU should be still (motionless) during the zeroing process.** The argument of the command <x> is a single binary byte that tells the DMU how many measurements to average over. The units are 10 measurements per increment of <x>. For example, to average over 300 measurements, you would send the command z<30>, which in hex is 7A 1E.

**Command**

Query DMU Version

**Character(s) Sent**

v

**Response**

ASCII string

**Description**

This queries the DMU firmware and will tell you the DMU type and firmware version. The response is an ASCII string. The exact string will vary according to the DMU type and version.

**Command**

Query Serial Number

**Character(s) Sent**

S

**Response**

Serial number packet

**Description**

This queries the DMU for its serial number. The DMU will respond with a serial number data packet that consists of a header byte (FF), the

serial number in 4 bytes, and a checksum byte.  
The serial number bytes should be interpreted as a 32-bit unsigned integer. For example, the serial number 9911750 would be sent as the four bytes 00 97 3D C6.

Remember when sending the T<x> or z<x> command that each command is only two bytes long. For example, to tell the DMU to zero the rate sensors and average over 50 units, you would send two bytes 7A,32 (hex). 7A is the hex value of the ASCII “z” character, and 32 is the number 50 in hex. (The DMU averages over 10 samples for each unit in the z command.)

### 3.6 Data Packet Format

In general, the digital data representing each measurement is sent as a 16-bit number (two bytes). The data is sent MSB first then LSB.

In voltage mode, the data is sent as unsigned integers to represent the range 0 – 5 V.

In scaled and angle mode, the data generally represents a quantity that can be positive or negative. These numbers are sent as a 16-bit signed integer in 2's complement format. The data is sent as two bytes, MSB first then LSB.

In scaled and angle mode, the timer information and temperature sensor voltage are sent as unsigned integers.

The order of data sent will depend on the selected operating mode of the DMU.

Each data packet will begin with a header byte (255) and end with a checksum. The checksum is calculated in the following manner:

1. Sum all packet contents *except* header and checksum.
2. Divide the sum by 256.
3. The remainder should equal the checksum.

Table 5 shows the data packet format for each mode.

**Table 5. Data Packet Format (v1.2)**

Byte	VG Mode	Scaled Sensor Mode	Voltage Mode
0	Header (255)	Header (255)	Header (255)
1	Roll Angle (MSB)	Roll Rate (MSB)	Gyro Voltage X (MSB)
2	Roll Angle (LSB)	Roll Rate (LSB)	Gyro Voltage X (LSB)
3	Pitch Angle (MSB)	Pitch Rate (MSB)	Gyro Voltage Y (MSB)
4	Pitch Angle (LSB)	Pitch Rate (LSB)	Gyro Voltage Y (LSB)
5	Roll Rate (MSB)	Yaw Rate (MSB)	Gyro Voltage Z (MSB)
6	Roll Rate (LSB)	Yaw Rate (LSB)	Gyro Voltage Z (LSB)
7	Pitch Rate (MSB)	Acceleration X (MSB)	Accel Voltage X (MSB)
8	Pitch Rate (LSB)	Acceleration X (LSB)	Accel Voltage X (LSB)
9	Yaw Rate (MSB)	Acceleration Y (MSB)	Accel Voltage Y (MSB)
10	Yaw Rate (LSB)	Acceleration Y (LSB)	Accel Voltage Y (LSB)
11	Acceleration X (MSB)	Acceleration Z (MSB)	Accel Voltage Z (MSB)
12	Acceleration X (LSB)	Acceleration Z (LSB)	Accel Voltage Z (LSB)
13	Acceleration Y (MSB)	Temp Voltage (MSB)	Temp Voltage (MSB)
14	Acceleration Y (LSB)	Temp Voltage (LSB)	Temp Voltage (LSB)
15	Acceleration Z (MSB)	Time (MSB)	Time (MSB)
16	Acceleration Z (LSB)	Time (LSB)	Time (LSB)
17	Temp Voltage (MSB)	Checksum	Checksum
18	Temp Voltage (LSB)		
19	Time (MSB)		
20	Time (LSB)		
21	Checksum		

## ◀ NOTE

The header byte FF will likely not be the only FF byte in the data packet. You must count the bytes received at your serial port and use the checksum to ensure you are in sync with the data sent by the DMU. This is especially critical when using the continuous data packet output mode.

### 3.7 Timing

In some applications, using the DMU's digital output requires a precise understanding of the internal timing of the device. The processor internal to the DMU runs in a loop - collecting data from the sensors, processing the data, then collecting more data. The data is reported to the user through a parallel process. In continuous mode, the system processor activity is repeatable and accurate timing information can be derived based purely on the overall loop rate.


The unit goes through three processes in one data cycle. First, the sensors are sampled. Second, the unit processes the data for output. After processing the data, the DMU will make another measurement while presenting the current measurement for output. Third, the unit actually transfers the data out; either over the RS-232 port, or onto the analog outputs.

In the case of the analog output, the data is presented immediately on the analog output pins after the data processing step is over. In the case of the digital data, the data is transferred only if the previous data packet is cleared. The DMU continues to take data, so that in practice, roughly every third measurement will be available over the RS-232 interface.

A time tag is attached to each data packet. The time tag is simply the value of a free running counter at the time the A/D channels are sampled. The clock counts down from 65,535 to 0, and a single tick corresponds to 0.79 microseconds. The timer rolls over approximately every 50 milliseconds. The DMU outputs a timer pulse on pin 11 whenever the clock rolls over.

Table 6 shows the timing values for the VG600AA. The transfer times shown are based on a baud rate of 38,400. These numbers should be taken as a rough guide to the timing you will see on your unit.

#### DMU Timing

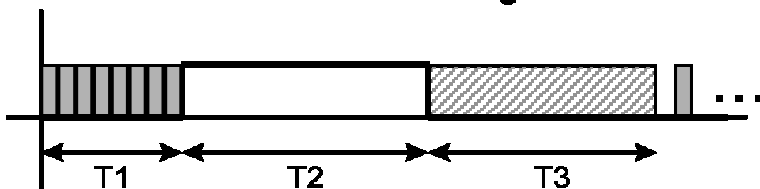

**Table 6. VG600AA Timing**

Operating Mode	Conversion Time (T1)	Processing Time (T2)	Transfer Time (T3)	Total Time	Data Rate Output
Voltage	3.2 ms	0.5 ms	4.7 ms	8.4 ms	125 Hz
Scaled	3.2 ms	0.9 ms	4.7 ms	8.8 ms	110 Hz
VG	3.2 ms	1.5 ms	5.2 ms	10 ms	100 Hz
Analog Output	3.2 ms	1.5 ms	-	4.7 ms	200 Hz

### 3.8 Temperature Sensor

The DMU has an onboard temperature sensor. The temperature sensor is used to monitor the internal temperature of the DMU to allow for temperature calibration of the sensors. The sensor is specified to be accurate within ±2% over the DMU temperature operating range. The DMU reads and outputs the temperature sensor voltage in the digital data packet with 12-bit precision.

The temperature sensor voltage is sent in the data packet scaled as:

$$V_{temp} (V) = \text{data} * 5/4096,$$

where **data** is the 16-bit unsigned integer sent as the temperature information in the data packet. (The DMU uses two full bytes to express the data, but it is really scaled to 12 bits.)

Calculate the temperature with the following calibration:

$$T (^{\circ}C) = 44.4 (^{\circ}C/V) * (V_{temp} (V) - 1.375 V),$$

where **V<sub>temp</sub>** is the temperature sensor voltage sent in the DMU data packet.

The DMU temperature sensor is internal to the DMU, and is not intended to measure the ambient temperature. The internal temperature of the DMU may be as much as 15°C higher than the ambient temperature.

### 3.9 Analog Output

## ❖ NOTE

See Appendix D for the correct pin out for Model VG600AA-204.

The DMU provides six fully conditioned analog outputs in scaled mode – three accelerometer voltages and three rate sensor voltages. In angle mode, the scaled accelerometer voltages are replaced with the pitch and roll analog voltages. In all modes, the raw accelerometer sensor output is also

available. The analog signals can be connected directly to an A/D or other data acquisition device without further buffering. The analog outputs all have a 1 k $\Omega$  resistor in series to protect against short circuits. This should be taken into account when using data acquisition systems with moderate input impedances (10 k $\Omega$ .)

The DMU must be set to scaled sensor mode or angle mode to enable the scaled analog signals.

### 3.9.1 "Raw" Accelerometer Voltage

The analog outputs from the accelerometers are taken directly from the sensor through a buffer. They are "raw" in the sense that they do not represent a calculated or calibrated value. You will need the zero bias point and scale factor given on the DMU calibration sheet to turn the analog voltage into an acceleration measurement.

To find the acceleration in G's, use the following conversion:

$$\text{accel (G)} = (\mathbf{V}_{\text{out}}(\text{V}) - \mathbf{bias}(\text{V})) * \mathbf{sensitivity}(\text{G/V}),$$

where **accel** is the actual acceleration measured,  $\mathbf{V}_{\text{out}}$  is the voltage at the analog output, **bias** is the zero-G bias voltage, and **sensitivity** is the scale factor in units G/volts.

For example, if the x-axis of your accelerometer has a zero-G bias of 2.512 V, a sensitivity of 1.01 G/V, and you measure 2.632 V at the analog output, the actual acceleration is  $(2.632 \text{ V} - 2.512 \text{ V}) * 1.01 \text{ G/V} = 0.121 \text{ G}$ . The "raw" accelerometer voltages will always be available on pins 5- 7.

### 3.9.2 Scaled Accelerometer Voltage

In scaled mode, the DMU will create scaled analog accelerometer voltages on pins 12 – 14. In scaled mode, these accelerations will always be in the DMU body frame. These analog voltages reflect any calibration or correction the DMU applies to the accelerometer data. The analog voltage is created by an internal D/A converter using the digital data available to the DSP. The data is scaled to the range  $\pm 4.096 \text{ V}$  with 12-bit resolution. You do not need to use the calibration data that came with the DMU to use these outputs – the DMU is already applying the calibration stored in its EEPROM to the data.

To find the acceleration in G's, use the following conversion:

$$\text{accel (G)} = \mathbf{GR} * 1.5 * \mathbf{V}_{\text{out}}(\text{V}) / 4.096 \text{ V},$$

where **accel** is the actual acceleration measured,  $\mathbf{V}_{\text{out}}$  is the voltage at the analog output and **GR** is the G range of your sensors. The G range is listed on the calibration sheet. For example, if your DMU has  $\pm 2 \text{ G}$  accelerometers, **GR** is 2.

In angle mode, the X, Y, and Z acceleration measurements will be output on pins 8, 9 and 14. For models –201 and –203, the acceleration reported will be in the earth level frame; for models –202 and –204 the acceleration reported will be in the DMU body frame.

### 3.9.3 Scaled Rate Sensor Voltage

The DMU will output analog voltages representing the rate sensor measurement on pins 8 – 10 in scaled sensor mode. In angle mode, only the yaw rate sensor will be output, on pin 10.

The analog outputs for the angular rate signals are not taken directly from the rate sensors; they are created by a D/A converter internal to the DMU. The output range is  $\pm 4.096\text{V}$  with 12-bit resolution. The analog data will represent the actual measured quantities, in engineering units, not the actual voltage at the sensor output. To convert the analog output to a sensor value use the following relation:

$$\text{rate} = \text{RR} * 1.5 * V_{\text{out}} (\text{V}) / 4.096 \text{ V},$$

where **rate** is the actual measured rate in units  $^{\circ}/\text{s}$ , **RR** is the angular rate range of your sensor and  $V_{\text{out}}$  is the measured voltage at the analog output.

## NOTE

**RR** is 260 for all DMU-FOGs

### 3.9.4 Stabilized Pitch and Roll Voltages (VGX and FOG only)

In angle mode, the DMU outputs the stabilized pitch and roll angle analog voltages on pins 12 and 13. The analog pitch and roll outputs are created by the DMU internal D/A. The voltage output will be in the range  $\pm 4.096 \text{ V}$  with 12-bit resolution. The output is scaled so that full scale is  $90^{\circ}$  for both pitch and roll. To convert the voltage to an actual angle, use the following conversion:

$$\text{angle} = 90^{\circ} * V_{\text{out}} (\text{V}) / 4.096 \text{ V},$$

where angle is the actual pitch or roll **angle** in degrees, and  $V_{\text{out}}$  is the analog pitch or roll voltage measured.

### 3.10 Adaptive-T Algorithm (Optional, must be installed at Crossbow factory)

There is no one optimal erection rate for all environments. A high erection rate is better when you are closer to a static situation, and a low erection rate is better when you are in a dynamic situation. Crossbow has developed an algorithm to automatically switch the erection rate (the T parameter) based on the dynamics measured by the DMU. This algorithm is referred to as adaptive-T and must be implemented at the factory. An overview of the

algorithm is presented below; note that the user still has a certain amount of control over the adaptive-T function.

When the unit is powered up and initialized, and the adaptive-T-Setting feature has been chosen, the unit will default to adaptively tune the T-Setting between a maximum T-Setting of 70, and a minimum T-Setting of 20. The user has the ability to change the effect of the adaptive-T function through the T-Setting command as before, but the new feature is implemented as follows:

If the user sets the T-Setting anywhere between 0 and 70, then the adaptive-T algorithm will tune the T-Setting between the T-Setting chosen and a T-Setting of 70, by scaling the setting based on sensed accelerations. For instance during large accelerations (high-G maneuvers) the T-setting will be set to the T-Setting chosen, and during low accelerations the T-setting will be set to 70. In this way the T-Setting chosen controls the minimum T-setting that the algorithm will use up to the value 70. A T-Setting of 0 may be perfectly appropriate, but care must be taken if it is known that a high-G maneuver will be maintained for a very long period. If the T-setting is too low, and the maneuver is a very long one, then the angle output may drift during the maneuver.

If the T-Setting is set to between 70 and the maximum 255, then the erection algorithm behaves normally by linearly correcting the gyros as before.

While the adaptive-T algorithm offers a hands-off approach to the T-Setting problem, some control over the algorithm is still allowed. The user should still evaluate the performance of the algorithm in each application to achieve the best results.

## 4 DMU Operating Tips

### 4.1 The “Zero” Command

The “z<x>” command is used to zero the angular rate sensor biases. This command does not “zero” the angle output! This should be an essential part of your strategy in using the DMU effectively. Stabilized pitch and roll angles are calculated by integrating the output of the angular rate sensors. Rate sensors are subject to small offsets in the angular rate measurement. A constant offset error in angular rate will integrate into an error in angle that increases linearly with time -- angular drift. The VG600AA uses accelerometers to correct the calculated angle, but in a dynamic situation, the accelerometers will be an inaccurate indication of the angle due to motional accelerations. The DMU rate sensors should therefore be zeroed to maintain the best accuracy.

Zeroing the rate sensors allows you to use a smaller value for the erection rate (T-Setting), which gives you better performance in dynamic environments.

The rate sensors need to be zeroed more often when subject to large shocks or extremes of temperature.

The DMU unit should be still during the zeroing process, but need not be level. You should let the DMU warmup for 5 minutes before issuing the zero command. Zeroing the DMU measures the bias in the output of the rate sensors when the DMU is in a condition of zero angular rate, and uses these values of the biases as the new offset calibrations for the rate sensors. The zeroing command does not level the stabilized angle output.

The DMU will average over a number of samples equal to ten times the value of the parameter passed with the “z<x>” command. For example, if you send the DMU the command “z<100>”, the DMU will average over 1000 samples. As a rule of thumb, each sample will take 3 – 4 ms. A good value to start with for the averaging command is 200. You would send the two bytes 7A,C8 (hex).

Remember that the DMU does not store the rate sensor zero calibration in non-volatile memory. If you cycle power to the DMU, it loses the zero calibration. Ideally, you would issue the zero command every time you power on the DMU. Also ideally, you would let the DMU warm up for 5 minutes before zeroing the rate sensors.

If you find that the DMU zeroing algorithm does not work well in your particular application, please contact Crossbow to discuss possible options.

### 4.2 The Erection Rate

The erection rate parameter controls the weighting between the rate gyro sensors and the accelerometers. This is the rate at which the direction of

vertical as measured by integrating the rate gyros is forced to agree with the direction of vertical as measured by the accelerometers. The erection rate is specified in degrees per minute. The erection rate must be higher than the drift rate of the rate gyros, or the calculated angles will drift off with increasing error. If the erection rate is too high, however, the calculated angles will be forced to follow the accelerometers too closely. This will lead to inaccuracies when the unit is under dynamic conditions.

One way to start is to set the erection rate about twice as fast as the worst rate gyro drift rate. This is appropriate for a dynamic environment, when the unit will be under significant acceleration. Estimate the drift rate by looking at the offset on the rate gyro output. Use the zero command first to zero the rate gyros. The rate gyro output is in degrees per second; the erection rate is set in degrees per minute. So take the rate gyro offset; multiply by 60 to turn it into degrees per minute; multiply by two and use this as a starting value for the erection rate. As an example, if the rate sensor offset is 0.1 degrees per second, we would set the erection rate to  $0.1 \times 60 \times 2 = 12$ . The stabilized pitch and roll output will be responsive to actual rotations, and relatively insensitive to linear accelerations.

You can set the T-Setting in a qualitative way using X-View. Graph the pitch and roll. Zero the rate sensors. Start with the T-Setting at about 100. Lower the T-Setting in increments of 10 – 20 until the roll and/or pitch starts to drift. When the angle outputs start to drift, the T-Setting is just a bit lower than the rate sensor offset. Increase the T-Setting by about 5 each time. This should keep the angle outputs stable.

If you expect the DMU to be subject to changing temperatures, or to have to operate for long periods without rezeroing, you should increase the T-Setting further. You may have to experiment to find the best erection rate for your situation.

If the DMU is used in a less dynamic environment, the erection rate can be set much higher. The DMU angles will stabilize quicker to the gravity vector. So if the motion is slow, or if you sit in one position for a long time, then you should probably use a high erection rate.

A more advanced approach to the erection rate would take advantage of both regimes of operation. Use a low erection rate when the unit is subject to dynamic motion; use a high erection rate when the unit is relatively stable. You can use the DMU itself to distinguish between the two cases by looking for changes in the accelerometer outputs. For example, in an airplane, you could use a low erection rate when the airplane executes a banked turn; and a high erection rate (100+) when the plane is flying straight and level.

Unfortunately, there is no single ideal erection rate for all applications. We can suggest a starting point based on past experience with similar

applications, but you should be prepared to experiment some in the beginning to find the best setup for your DMU in your application.

### 4.3 Mounting the DMU

The DMU should be mounted as close to the center of gravity (CG) of your system as possible. This will minimize any “lever effect”. If it is not mounted at the center of gravity, then rotations around the center of gravity will cause the DMU accelerometers to measure acceleration proportional to the product of the angular rate squared and the distance between the DMU and the CG.

The DMU will measure rotations around the axes of its sensors. The DMU sensors are aligned with the DMU case. You should align the DMU case as closely as possible with the axes you define in your system. Errors in alignment will contribute directly into errors in measured acceleration and rotation relative to your system axes. The sides of the DMU case are used as reference surfaces for aligning the DMU sensor axes with your system.

The DMU should be isolated from vibration if possible. Vibration will make the accelerometer readings noisy, and can therefore affect the angle calculations. In addition, if the magnitude of the vibration exceeds the range of the accelerometer, the accelerometer output can saturate. This can cause errors in the accelerometer output.

The DMU case is not weather proof. You should protect the DMU from moisture and dust.

## ☑ EXAMPLE

### 4.4 DMU Start Up Procedure

As an example, look at how the DMU might be used in a car. Assume a VG600AA is mounted in an automobile and will be used to record the vehicle’s attitude during a drive. The test will be about 1 hour long. The VG600AA is mounted near the CG of the vehicle, and is connected to a laptop serial port during the test.

1. Turn on power to the DMU and let it warm up 5 – 10 minutes. Power can be on to all electronics, but the car engine should be off if it causes vibration to the DMU.
2. Zero the rate sensors. The engine is off, so there is no vibration.
3. Change the T-Setting. After zeroing, you should be able to set the T-Setting in the range 5 – 10 for a DMU-FOG.
4. Start the engine.
5. Start data collection.
6. Proceed with test.

## 4.5 Advanced Strategies for Adjusting the Erection Rate

The DMU attitude estimation algorithm is divided into two separate entities. Gyro angular rate information is integrated in time to propagate the DMU body attitude with respect to the tangent plane. If the initial attitude of the vehicle was known exactly and if the gyros provided perfect readings then this integration process would suffice. However, the initial state is seldom known to great precision, especially a vehicle's attitude, and the gyros usually provide corrupted data. Rate gyro bias, bias drift, misalignment, acceleration (g-sensitive), nonlinear (square term), and scale factor errors will be present in the angular rate measurements. The largest error is typically associated with the bias and bias drift terms. Without a correction algorithm and separate independent sensors, the attitude estimation algorithm would diverge off the true trajectory. Accelerometers provide the separate measurements, which help keep the attitude estimates on track.

The correction algorithm involves deriving an estimate of the roll and pitch angle from the accelerometer's gravity reference, comparing this estimate to the gyro propagated quaternion Euler angles, and providing a linear feedback gain to the quaternion propagation to take out the errors observed from the gyro angular rate measurements. The correction feedback is also referred to as the "erection rate" implying that the attitude errors are erected out by moving the estimated orientation more towards the absolute attitude measurements derived from the accelerometer measurements. It is also given the name T-Setting to describe the user interface which allows the user to command the DMU to use a desired erection rate. Sensed dynamic accelerations can introduce error into the accelerometer absolute attitude reference. The angle calculation algorithm has no way of knowing whether the sensed acceleration change is being caused by an attitude tilt change in the gravity vector, or from external translational accelerations.

For this reason a user selectable erection rate is available which allows for the possibility of a rapidly maneuvering mission. There is a tradeoff between how much error in the gyros the algorithm can overcome with a low erection setting, compared to the errors induced from having a high erection rate while experiencing large maneuvering accelerations. The gyro zeroing command is useful in maintaining the gyro bias errors down to a minimum, which allows a lower T-Setting to be used during the mission. It must be noted that for the zeroing command to work properly, there must be no external disturbance to the unit (engine noise, wind disturbance, etc.) and it would be advised to perform a gyro zeroing in the initial phase of the mission when only electrical power is available. If the user has knowledge of the intensity of upcoming maneuvers or complete control of the flight profile, and can maintain constant serial communications with the DMU unit, then an adapted erection setting profile can be developed. An example follows.

## ☑ EXAMPLE

### 4.6 Adapted Flight Profile T-Setting

1. Vehicle electric power is applied to the DMU while the vehicle is out of external disturbances (within the hanger for instance).
2. Following a warm-up period, (10 minutes should suffice) a gyro-zeroing command is sent to the unit to average out the gyro biases.
3. Send a T-setting command to set the erection rate at a high setting (T-setting = 100), which should remove any initial attitude errors or drifts.
4. Engine turn-on and rollout onto the runway.
5. Maneuver 1 (Takeoff and climb to desired altitude) – set the erection rate to a low setting (T-setting = 7).
6. Maneuver 2 (1<sup>st</sup> Coast Phase) – set the erection rate to a high setting (T-setting=100).
7. Maneuver 3 (45 degree heading change) – set the erection rate to a low setting (T-setting = 7).
8. Maneuver 4 (2<sup>nd</sup> Coast Phase) – set the erection rate to a high setting (T-setting=100).
9. Maneuver 5 (180 degree turn and altitude change – very fast 20 second maneuver) – set the erection rate to an even lower setting since the maneuver is short and the dynamics are large (T-setting = 4).
10. Maneuver 6 (3<sup>rd</sup> Coast Phase) – set the erection rate to a very high setting to remove any gyro saturation or acceleration saturation from the previous high dynamic maneuver (T-setting=150), and then set the erection rate back to a high setting (T-setting=100).
11. Maneuver 7 (Altitude descent and landing) – set the erection rate to a low setting (T-setting = 7).
12. Maneuver 8 (Runway taxi and stop) – set the erection rate to a high setting (T-setting = 100).

The profile above can be used as an example to produce an adapted erection rate profile to achieve the best possible performance from the DMU. A constant erection rate would not allow the DMU to perform as well because of the highly dynamic environment. A high erection rate would result in very large errors during the high acceleration maneuvers; a low erection rate might not recover from a large gyro bias drift or saturation of the rate sensors because of very large dynamics. Since every flight profile is different, this approach necessitates careful erection rate profile planning. If enough care is taken, active control of the erection rate will provide the best

performance.

## 5.1 VG600AA Outline Drawing

The technical drawing illustrates the FOG connector assembly through three distinct views:

- Perspective View (Top Left):** Shows the coordinate system with *X* (roll), *Y* (pitch), and *Z* (yaw) axes. The vertical distance from the base to the center of the FOG is 4.00 in (10.16 cm). The horizontal distance from the *Y*-axis to the center of the FOG is 5.00 in (12.70 cm).
- Connector-side View (Middle):** A side profile of the connector showing a 6-pin D-sub connector. The horizontal distance from the *Y*-axis to the center of the connector is 6.00 in (15.24 cm). The vertical distance from the base to the center of the connector is 0.10 in (0.25 cm).
- Top View (Bottom):** A top-down view of the assembly. The horizontal distance from the *Y*-axis to the center of the connector is 5.00 in (12.70 cm). The vertical distance from the base to the center of the connector is 0.25 in (0.64 cm). The diameter of the base is 0.22 in (0.56 cm).

6 Appendix B. DMU Output Quick Reference

GR is the G-range of the accelerometers. For example, if your DMU has ±2 G accelerometers, GR = 2.

RR is the rate range of the rate sensors. RR = 260 for all VG600AAs.

6.1 Analog Output Conversion

NOTE

See Appendix D for the Analog Output Conversion for Model VG600AA-204.

Accelerometer (Raw output)

Use sensitivity, offset from calibration sheet. Output is raw sensor voltage.

- Pin 5 X axis accelerometer, raw
- Pin 6 Y axis accelerometer, raw
- Pin 7 Z axis accelerometer, raw

Accelerometer (Scaled Mode only)

Accel (G) =  $V_{out}(V) * GR * 1.5/4.096$

- Pin 12 X axis accelerometer
- Pin 13 Y axis accelerometer
- Pin 14 Z axis accelerometer

Accelerometer (Angle Mode only)

Accel (G) =  $V_{out}(V) * GR * 1.5/4.096$

- Pin 8 X axis accelerometer
- Pin 9 Y axis accelerometer
- Pin 14 Z axis accelerometer

Rate Sensor (Scaled Mode Only)

Rate (°/s) =  $V_{out}(V) * RR * 1.5/4.096$

- Pin 8 Roll rate sensor
- Pin 9 Pitch rate sensor
- Pin 10 Yaw rate sensor

Rate Sensor (Angle Mode Only)

Rate (°/s) =  $V_{out}(V) * RR * 1.5/4.096$

- Pin 10 Yaw rate sensor
- Roll rate and Pitch rate not available in Angle Mode

Roll, Pitch (Angle Mode only)

Angle (°) =  $V_{out}(V) * 90/4.096$

- Pin 12 Roll Angle
- Pin 13 Pitch Angle

## 6.2 Digital Output Conversion

Data is sent as 16-bit signed integer for all but Temperature. Temperature sensor data is sent as unsigned integer.

### *Acceleration*

$$\text{Accel (G)} = \text{data} * \text{GR} * 1.5 / 2^{15}$$

### ***Roll, Pitch (Angle Mode only)***

$$\text{Angle } (^{\circ}) = \text{data} * 180 / 2^{15}$$

*Rate*

$$\text{Rate } (^{\circ}/\text{s}) = \text{data} * \text{RR} * 1.5 / 2^{15}$$

### Temperature

**Temperature (°C) =**  
**[(data \* 5/4096) – 1.375]\*44.44**

## 7 Appendix C. DMU Command Quick Reference

Command (ASCII)	Response	Description
R	H	Reset: Resets the DMU firmware to default operating mode of Voltage Mode and Polled operation.
r	R	Change to Voltage Mode.
c	C	Change to Scaled Sensor Mode.
a	A	Change to Angle Mode (VG Mode).
P	None	Change to polled mode. Data packets sent when a G is received by the DMU.
C	None	Change to continuous data transmit mode. Data packets streamed continuously. Packet rate is dependent on operating mode. Sending "G" stops data transmission.
G	Data Packet	Get Data: Requests a packet of data from the DMU. Data format depends on operating mode.
T <0-255>*	None	2-byte command sequence that changes the vertical gyro erection rate.
z <0-255>*	Z	Calibrate and set zero bias for rate sensors by averaging over time. 1st byte initiates zeroing process. 2nd byte sets duration for averaging. Unit should be still during zeroing.
S	ASCII String	Query DMU serial number. Returns serial number as 32 bit binary number.
v	ASCII String	Query DMU version ID string. Returns ASCII string.

\*Note: argument of command is sent as a single hex byte, not as an ASCII character.

## 8 Appendix D. VG600AA-204 Analog Outputs

### 8.1 Model VG600AA-204 Connector Pin Out

Pin	Signal
1	RS-232 Transmit Data
2	RS-232 Receive Data
3	Positive Power Input (+)
4	Ground
5	X-axis accelerometer Analog voltage <sup>1</sup>
6	Y-axis accelerometer Analog voltage <sup>1</sup>
7	Z-axis accelerometer Analog voltage <sup>1</sup>
8	Roll rate analog voltage <sup>2</sup>
9	Pitch rate analog voltage <sup>2</sup>
10	Yaw rate analog voltage <sup>2</sup>
11	NC – factory use only
12	Roll angle analog voltage <sup>3</sup>
13	Pitch angle analog voltage <sup>3</sup>
14	NC – factory use only
15	NC – factory use only

Notes:

1. The accelerometer analog voltage outputs are the raw sensor output. These outputs are taken from the output of the accelerometers.
2. The rate sensor analog voltage output is scaled to represent °/s. This output is created by a D/A converter.
3. The pitch and roll angle analog outputs are scaled to represent degrees. These outputs are created by a D/A converter.

## 8.2 Model VG600AA-204 Analog Output Conversion

**GR** is the G-range of the accelerometers. For example, if your DMU has  $\pm 2$  G accelerometers,  $GR = 2$ .

**RR** is the rate range of the rate sensors.  $RR = 260$  for all VG600AAs.

### *Accelerometer (Raw output)*

Use sensitivity, offset from calibration sheet. Output is raw sensor voltage.

Pin 5 X axis accelerometer, raw  
Pin 6 Y axis accelerometer, raw  
Pin 7 Z axis accelerometer, raw

### *Rate Sensor (Scaled Mode Only)*

**Rate** ( $^{\circ}/s$ ) =

$$V_{out}(V) * RR * 1.5/4.096$$

Pin 8 Roll rate sensor  
Pin 9 Pitch rate sensor  
Pin 10 Yaw rate sensor

### *Accelerometer (Scaled Mode only)*

**Accel** (G) =

$$V_{out}(V) * GR * 1.5/4.096$$

Pin 12 X axis accelerometer  
Pin 13 Y axis accelerometer  
Pin 14 Z axis accelerometer

### *Rate Sensor (Angle Mode only)*

**Accel** (G) =

$$V_{out}(V) * RR * 1.5/4.096$$

Pin 8 Roll rate sensor  
Pin 9 Pitch rate sensor  
Pin 10 Yaw rate sensor

### *Roll, Pitch (Angle Mode only)*

**Angle** ( $^{\circ}$ ) =  $V_{out}(V) * 90/4.096$

Pin 12 Roll Angle  
Pin 13 Pitch Angle

## 9 Appendix E. Warranty and Support Information

### 9.1 Customer Service

As a Crossbow Technology customer you have access to product support services which include:

- Single-point return service
- Web-based support service
- Same day troubleshooting assistance
- Worldwide Crossbow representation
- Onsite and factory training available
- Preventative maintenance and repair programs
- Installation assistance available

### 9.2 Contact Directory

United States:            Phone: 1-408-965-3300 (7 AM to 7 PM PST)  
                                 Fax: 1-408-324-4840 (24 hours)  
                                 Email: [techsupport@xbow.com](mailto:techsupport@xbow.com)

Non-U.S.:    refer to website [www.xbow.com](http://www.xbow.com)

### 9.3 Return Procedure

#### 9.3.1 Authorization

Before returning any equipment, please contact Crossbow to obtain a Returned Material Authorization number (RMA).

Be ready to provide the following information when requesting a RMA:

- Name
- Address
- Telephone, Fax, Email
- Equipment Model Number
- Equipment Serial Number
- Installation Date
- Failure Date
- Fault Description
- Will it connect to X-View?

### 9.3.2 Identification and Protection

If the equipment is to be shipped to Crossbow for service or repair, please attach a tag TO THE EQUIPMENT, as well as the shipping container(s), identifying the owner. Also indicate the service or repair required, the problems encountered, and other information considered valuable to the service facility such as the list of information provided to request the RMA number.

Place the equipment in the original shipping container(s), making sure there is adequate packing around all sides of the equipment. If the original shipping containers were discarded, use heavy boxes with adequate padding and protection.

### 9.3.3 Sealing the Container

Seal the shipping container(s) with heavy tape or metal bands strong enough to handle the weight of the equipment and the container.

### 9.3.4 Marking

Please write the words, “**FRAGILE, DELICATE INSTRUMENT**” in several places on the outside of the shipping container(s). In all correspondence, please refer to the equipment by the model number, the serial number, and the RMA number.

### 9.3.5 Return Shipping Address

Use the following address for all returned products:

Crossbow Technology, Inc.  
41 E. Daggett Drive  
San Jose, CA 95134  
Attn: RMA Number (XXXX)

## 9.4 Warranty

The Crossbow product warranty is one year from date of shipment.

**SUNSTAR商斯达实业集团**是集研发、生产、工程、销售、代理经销、技术咨询、信息服务等为一体的高科技企业，是专业高科技电子产品生产厂家，是具有 10 多年历史的专业电子元器件供应商，是中国最早和最大的仓储式连锁规模经营大型综合电子零部件代理分销商之一，是一家专业代理和分销世界各大品牌IC芯片和电子元器件的连锁经营综合性国际公司。在香港、北京、深圳、上海、西安、成都等全国主要电子市场设有直属分公司和产品展示展销窗口门市部专卖店及代理分销商，已在全国范围内建成强大统一的供货和代理分销网络。我们专业代理经销、开发生产电子元器件、集成电路、传感器、微波光电元器件、工控机/DOC/DOM电子盘、专用电路、单片机开发、MCU/DSP/ARM/FPGA软件硬件、二极管、三极管、模块等，是您可靠的一站式现货配套供应商、方案提供商、部件功能模块开发配套商。**专业以现代信息产业（计算机、通讯及传感器）三大支柱之一的传感器为主营业务，专业经营各类传感器的代理、销售生产、网络信息、科技图书资料及配套产品设计、工程开发。我们的专业网站——中国传感器科技信息网（全球传感器数据库）[www.SENSOR-IC.COM](http://www.SENSOR-IC.COM) 服务于全球高科技生产商及贸易商，为企业科技产品开发提供技术交流平台。欢迎各厂商互通有无、交换信息、交换链接、发布寻求代理信息。欢迎国外高科技传感器、变送器、执行器、自动控制产品厂商介绍产品到 中国，共同开拓市场。**本网站是关于各种传感器-变送器-仪器仪表及工业自动化大型专业网站，深入到工业控制、系统工程计 测量、自动化、安防报警、消费电子等众多领域，把最新的传感器-变送器-仪器仪表买卖信息，最新技术供求，最新采购商，行业动态，发展方向，最新的技术应用和市场资讯及时的传递给广大科技开发、科学研究、产品设计人员。本网站已成功为石油、化工、电力、医药、生物、航空、航天、国防、能源、冶金、电子、工业、农业、交通、汽车、矿山、煤炭、纺织、信息、通信、IT、安防、环保、印刷、科研、气象、仪器仪表等领域从事科学研究、产品设计、开发、生产制造的科技人员、管理人员、和采购人员提供满意服务。**我公司专业开发生产、代理、经销、销售各种传感器、变送器、敏感元器件、开关、执行器、仪器仪表、自动化控制系统：专门从事设计、生产、销售各种传感器、变送器、各种测控仪表、热工仪表、现场控制器、计算机控制系统、数据采集系统、各类环境监控系统、专用控制系统应用软件以及嵌入式系统开发及应用等工作。**如热敏电阻、压敏电阻、温度传感器、湿度变送器、湿度传感器、湿度变送器、气体传感器、压力传感器、压力变送、称重传感器、物（液）位传感器、物（液）位变送器、流量传感器、流量变送器、电流（压）传感器、溶氧传感器、霍尔传感器、图像传感器、超声波传感器、位移传感器、速度传感器、加速度传感器、扭距传感器、红外传感器、紫外传感器、火焰传感器、激光传感器、振动传感器、轴角传感器、光电传感器、接近传感器、干簧管传感器、继电器传感器、微型电泵、磁敏（阻）传感器、压力开关、接近开关、光电开关、色标传感器、光纤传感器、齿轮测速传感器、时间继电器、计数器、计米器、温控仪、固态继电器、调压模块、电磁铁、电压表、电流表等特殊传感器。同时承接传感器应用电路、产品设计和自动化工程项目。

欢迎索取免费详细资料、设计指南和光盘；产品凡多，未能尽录，欢迎来电查询。

更多产品请看本公司产品专用销售网站：

商斯达中国传感器科技信息网：<http://www.sensor-ic.com/>

商斯达工控安防网：<http://www.pc-ps.net/>

商斯达电子元器件网：<http://www.sunstare.com/>

商斯达微波光电产品网：[HTTP://www.rfoe.net/](http://www.rfoe.net/)

商斯达消费电子产品网：<http://www.icasic.com/>

商斯达军工产品网：<http://www.junpinic.com/>

商斯达实业科技产品网：<http://www.sunstars.cn/>传感器销售热线：

地址：深圳市福田区福华路福庆街鸿图大厦 1602 室

电话：0755-83607652 83376489 83376549 83370250 83370251 82500323

传真：0755-83376182 (0) 13902971329 MSN: [SUNS888@hotmail.com](mailto:SUNS888@hotmail.com)

邮编：518033 E-mail:[szss20@163.com](mailto:szss20@163.com) QQ: 195847376

技术支持：0755-83394033 13501568376