



RS232 Test Board

Application Note A66

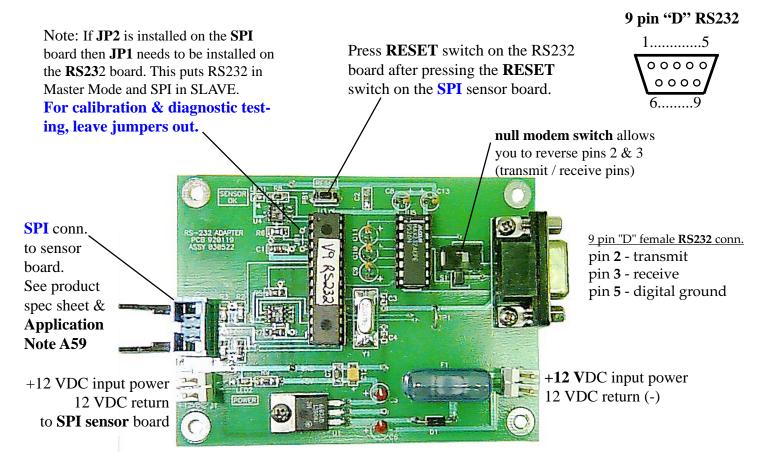

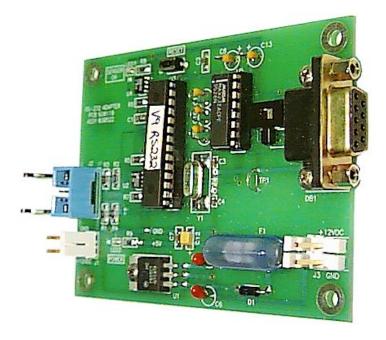

Any terminal emulation program in DOS like **PCPLUS** or **HyperTerminal** in Windows or in Windows click on "START", click on "Run..," and type "**Terminal.exe**" to communicate over COM Port 1 or 2 using 9600 baud, no parity, 8 bits, 1 stop bit. Switch the null modem switch if Receive / Transmit pins are reversed in the serial cable you are using to connect to the COM Port. If you are communicating with the RS232 board you will get "**LOCKED**" as a message when you press the RESET switch.

Type in capital letters "VTI" and you will get "UNLOCKED". Type "1" and you will get continuous % gas readings. See page 2 & Application Note A59 for all commands and responses.

For test and troubleshooting you may connect an RS232 test board to the SPI connector as shown on page 1 and the RS232 9 pin D connector (DB9) to your computer's **COM port**. A terminal emulation program (VT100 or VT220 type dumb terminal) **HyperTerminal** program that comes with Windows or a program like **PCPLUS** in DOS may be used to talk to the RS232 Test Board. If you have properly configured your terminal program and connected the correct COM port to the RS232 connector you should get a response on your screen of "**LOCKED**" when your press the RESET switch on the RS232 Test Board. Type VTI and it will unlock. This will allow you to type the commands listed below:

Command	<u>Action</u>				
1	DD.DD % §	gas	Continuous		
1	Toggles all	Toggles all calculated values:			
	M	Measurements			
first "1" so	crolls % gas	0.00	% gas		
data, the next "	1" gives	3.881	18 volts pp		
measurement table to right,		27.45	Deg C		
next "1" goes back to scroll)		0.001	0 Atten		
		20.0	Range		
		0.000	0-1 V out		
		3.885	5 VZ TC'd		
		1.970	8 VSTC'd		

Note: All values are stored on EEPROM so they are not lost during power failures.

Command	Action
VTI	Unlocks, time out 5 min
CX DDD.DDDD	Enter Curve Coefficient X =0-7 & value D
STC D.DDDDD	Enter Span Temperature Coefficient D
ZTC D.DDDDD	Enter Zero Temperature Coefficient D
STAR DDD.DD	Enter Span Target value D
VS D.DDDD	Enter Span voltage D (measured by SPAN)
VZ D.DDDD	Enter Zero voltage D (measured by ZERO)
SETZ	Perform auto ZERO & store VZ & TZ
SETS	Perform auto SPAN to STAR & store VS & TS
OFF D.DDDD	Enter new AgingFactor, effects Field Calib.
FILTER D	Enter new filter value D 1-10 lamp cycles ave
D CCCCCCCC	Enter serial # (9 alphanumeric characters)
RT	RESETS the RS232 Test Board
RS	RESETS the SPI board

2	Displays all calibration data Cal			
	VZ 3.8801 Volts (ZERO)			
	VS 1.9683 Volts (full scale)			
	TZ 28.43 Deg C (zero cal temp)			
	TS 28.43 Deg C (span cal temp)			
	ZTC -0.005486 V/degC (ZERO gas temperature coefficient)			
	STC 0.002904 V/degC (STAR SPAN gas temperature coefficient)			
STAR 5.0 % gas (target calibration gas)				
	OFF 1.0000 Volts (aging factor as a result of field1 point calibration)			

3	Displays all response curve coefficients :	Command	Action		
	Curve	5	Change 2%Gas reading & STAR		
	CO 0.000000		values to 4 decimal places in		
	C1 8.438299		SLAVE mode only. Press RESET		
	C2 33.528999		or type RT to reset back to two		
	C3 66.509003		decimal places. Pertains to 2005		
	C4 16.270000		and 2015SPI-1 2% units only.		
	C5 -24.007000				
	C6 0.000000 (if coefficient is "0" the ter	m will drop out.			
	C7 0.000000 Hence this is an example	e of a 5th order.)			
4	Display Version, Serial Number, and Filter as	eraging time			
	Sys Info				
	UNV.16 RS232 Rev (read from e-prom)			

App Note A66 Page 2 of 3 • Revised: 7-Jul-01 © 1994-2001 VALTRONICS

SPI Rev

0104243

20.32

DATE

Filter

(factory calibration date & serial number: April 2001 # 243)

(variable 1 to 15 seconds, factory set at 15 seconds)

(read from e-prom)

RS232 Test Board

Application Note A66

RS-232 Test Board shown with a Model **2015SPI-4 100% CH**₄ methane monitor or any 200**5**SPI-**XX** (remote diffusion gas cell) or 20**15**SPI-**XX** (on board flow through gas cell).

VALTRONICS

Press **RESET** switch on the RS232 board after pressing the **RESET** switch on the **SPI** sensor board. If you are communicating with the RS232 board you will get "**LOCKED**" as a message using HyperTerminal on your PC. It will take a couple minutes for the sensor board to stabilize after the RESET switch is pressed. Type "**VTI**" to unlock and you will be able to send commands listed on page 2. Type "**1**" and you will get continuous % gas readings. Type "**1**" again and you will get a snap shot of the % gas response followed by the peak to peak voltage out of the preamplifier, the temperature of the detector in °C, the fractional attenuation of this peak to peak signal as compared to **VZ** (stored ZERO gas response), the **RANGE** (defines 0-1V full scale), the 0-1 V output for that % gas reading, the temperature compensated ZERO gas response, and the temperature compensated full scale response (**VS**) in volts peak to peak. Type "**2**" and you will get all the stored calibration data for this serial #. Type "**3**" and you will get the polynomial curve coefficients that give this serial # its linear response. Type "**4**" and you will get the Version of the Test Board firmware followed by the Version of the sensor board, the serial#, and the (Filter) signal averaging time of 15 seconds. **A print out of all of this calibration data is shipped with each serial numbered sensor**. This data is stored in the **EEPROM** on the board.

